

Series 2280 Precision Measurement DC Power Supplies Quick Start Guide



Safety precautions

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with nonhazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to the user documentation for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product warranty may be impaired.

The types of product users are:

Responsible body is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating properly, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the user documentation. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, perform safe installations, and repair products. Only properly trained service personnel may perform installation and service procedures.

Keithley products are designed for use with electrical signals that are measurement, control, and data I/O connections, with low transient overvoltages, and must not be directly connected to mains voltage or to voltage sources with high transient overvoltages. Measurement Category II (as referenced in IEC 60664) connections require protection for high transient

overvoltages often associated with local AC mains connections. Certain Keithley measuring instruments may be connected to mains. These instruments will be marked as category II or higher.

Unless explicitly allowed in the specifications, operating manual, and instrument labels, do not connect any instrument to mains.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30 V RMS, 42.4 V peak, or 60 VDC are present. A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.

Operators of this product must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 V, no conductive part of the circuit may be exposed.

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance-limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, ensure that the line cord is connected to a properly-grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

When installing equipment where access to the main power cord is restricted, such as rack mounting, a separate main input power disconnect device must be provided in close proximity to the equipment and within easy reach of the operator.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.

For safety, instruments and accessories must be used in accordance with the operating instructions. If the instruments or accessories are used in a manner not specified in the operating instructions, the protection provided by the equipment may be impaired.


Do not exceed the maximum signal levels of the instruments and accessories. Maximum signal levels are defined in the specifications and operating information and shown on the instrument panels, test fixture panels, and switching cards.


When fuses are used in a product, replace with the same type and rating for continued protection against fire hazard.


Chassis connections must only be used as shield connections for measuring circuits, NOT as protective earth (safety ground) connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.


If a  screw is present, connect it to protective earth (safety ground) using the wire recommended in the user documentation.

The  symbol on an instrument means caution, risk of hazard. The user must refer to the operating instructions located in the user documentation in all cases where the symbol is marked on the instrument.

The  symbol on an instrument means warning, risk of electric shock. Use standard safety precautions to avoid personal contact with these voltages.


The  symbol on an instrument shows that the surface may be hot. Avoid personal contact to prevent burns.

The  symbol indicates a connection terminal to the equipment frame.

If this  symbol is on a product, it indicates that mercury is present in the display lamp. Please note that the lamp must be properly disposed of according to federal, state, and local laws.

The **WARNING** heading in the user documentation explains hazards that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading in the user documentation explains hazards that could damage the instrument. Such damage may invalidate the warranty.

The **CAUTION** heading with the  symbol in the user documentation explains hazards that could result in moderate or minor injury or damage the instrument. Always read the associated information very carefully before performing the indicated procedure. Damage to the instrument may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.

Before performing any maintenance, disconnect the line cord and all test cables.

To maintain protection from electric shock and fire, replacement components in mains circuits — including the power transformer, test leads, and input jacks — must be purchased from Keithley. Standard fuses with applicable national safety approvals may be used if the rating and type are the same. The detachable mains power cord provided with the instrument may only be replaced with a similarly rated power cord. Other components that are not safety-related may be purchased from other suppliers as long as they are equivalent to the original component (note that selected parts should be purchased only through Keithley to maintain accuracy and functionality of the product). If you are unsure about the applicability of a replacement component, call a Keithley office for information.

Unless otherwise noted in product-specific literature, Keithley instruments are designed to operate indoors only, in the following environment: Altitude at or below 2,000 m (6,562 ft); temperature 0 °C to 50 °C (32 °F to 122 °F); and pollution degree 1 or 2.

To clean an instrument, use a cloth dampened with deionized water or mild, water-based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., a data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing. Safety precaution revision as of June 2017.

Safety

Power and environmental specifications

For indoor use only.

Power supply	100 V/120 V/220 V/240 V AC, 50 Hz or 60 Hz
Operating altitude	Maximum 2000 m (6562 ft) above sea level
Operating temperature	0 °C to 40 °C, full accuracy to 80% relative humidity at up to 35 °C, noncondensing
Storage temperature	-25 °C to 70 °C, 5% to 95% relative humidity at up to 40 °C and 5% to 60% relative humidity above 40 °C up to 70 °C
Pollution degree	2

CAUTION

Carefully consider and configure the appropriate output-off state, source levels, and compliance levels before connecting the instrument to a device that can deliver energy. Failure to consider the output-off state, source levels, and compliance levels may result in damage to the instrument or to the device under test.

Introduction

Thank you for choosing a Keithley Instruments product. The Series 2280 Precision Measurement DC Power Supplies are high-sensitivity, accurate, programmable instruments that source low noise and stable voltage, and can monitor load currents over a wide dynamic range, from amperes to nanoamperes. With a high-resolution, 4.3-inch color display, numerous parameters describing the state of the instrument are displayed that allow you to get the most information from your measurements.

In addition, you can monitor trends such as drift with the built-in plotting functionality. As a power supply in an automated test system, this power supply provides a list mode and triggers, and speed optimization to minimize test time.

Complete documentation for the Series 2280 instruments is available for download at [tek.com/product-support](https://www.tek.com/product-support).

Model number	Description
2280S-32-6	Precision Measurement Programmable DC Power Supply, 32 V, 6 A
2280S-60-3	Precision Measurement Programmable DC Power Supply, 60 V, 3.2 A

Unpack and inspect the instrument

To unpack and inspect the instrument:

1. Inspect the box for damage.
2. Open the top of the box.
3. Remove the documentation and accessories.
4. Carefully lift the instrument out of the box.
5. Remove the packaging insert.
6. Inspect the instrument for any obvious signs of physical damage. Report any damage to the shipping agent immediately.

CAUTION

Do not lift the Series 2280 using the front bezel. Lifting the instrument by the front bezel can cause instrument damage.



You should have received the Series 2280 with the following accessories:

1. Power line cord
2. Series 2280 Quick Start Guide (this document)
3. LAN crossover cable for ethernet
4. Keithley Instruments Safety Precautions
5. Rear-panel mating connector with cover

Refer to the packing list for additional items that may have shipped with your instrument.

Connect the instrument

Important test system safety information

This product is sold as a stand-alone instrument that may become part of a system that could contain hazardous voltages and energy sources. It is the responsibility of the test system designer, integrator, installer, maintenance personnel, and service personnel to make sure the system is safe during use and is operating properly.

You must also realize that in many test systems a single fault, such as a software error, may output hazardous signal levels even when the system indicates that there is no hazard present.

It is important that you consider the following factors in your system design and use:

- The international safety standard IEC 61010-1 defines voltages as hazardous if they exceed $30 V_{\text{RMS}}$ and $42.4 V_{\text{peak}}$, or 60 VDC for equipment rated for dry locations. Keithley Instruments products are only rated for dry locations.
- Read and comply with the specifications of all instruments in the system. The overall allowed signal levels may be constrained by the lowest rated instrument in the system. For example, if you are using a 500 V power supply with a 300 VDC rated switch, the maximum allowed voltage in the system is 300 VDC.
- Make sure any test fixture connected to the system protects the operator from contact with hazardous voltages, hot surfaces, and sharp objects. Use shields, barriers, insulation, and safety interlocks to accomplish this.
- Cover the device under test (DUT) to protect the operator from flying debris in the event of a system or DUT failure.
- Double-insulate all electrical connections that an operator can touch. Double insulation ensures the operator is still protected even if one insulation layer fails. Refer to IEC 61010-1 for specific requirements.

- Make sure all connections are behind a locked cabinet door or other barrier. This protects the system operator from accidentally removing a connection by hand and exposing hazardous voltages. Use high-reliability fail-safe interlock switches to disconnect power sources when a test fixture cover is opened.
- Where possible, use automatic handlers so operators are not required to access the DUT or other potentially hazardous areas.
- Provide training to all users of the system so they understand all potential hazards and know how to protect themselves from injury.
- In many systems, during power up, the outputs may be in an unknown state until they are properly initialized. Make sure the design can tolerate this situation without causing operator injury or hardware damage.

NOTE

To keep users safe, always read and follow all safety warnings provided with each of the instruments in your system.

Install the instrument

You can use the Series 2280 on a bench or in a rack. See the instructions that came with your rack-mount kit if you are installing the Series 2280 in a rack.

To prevent damaging heat build-up and to ensure specified performance, make sure there is adequate ventilation and air flow around the instrument to ensure proper cooling. Do not cover the ventilation holes on the top, sides, or bottom of the instrument.

Make sure the instrument is positioned so that it is easy to reach any disconnecting devices, such as the power cord and the power switch.

CAUTION

On some sensitive or easily damaged devices under test (DUTs), the instrument power-up and power down sequences can apply transient signals to the DUT that may affect or damage it. When testing this type of DUT, do not make final connections to it until the instrument has completed its power-up sequence and is in a known operating state.

Power up the instrument

The Series 2280 operates at 100 V, 120 V, 220 V, or 240 V with a frequency of 50 Hz or 60 Hz. Make sure that the AC line voltage indicator in the center of the rear-panel power module matches the AC line voltage in your facility.

⚠ WARNING

The power cord supplied with the Series 2280 contains a separate protective earth (safety ground) wire for use with grounded outlets. When proper connections are made, the instrument chassis is connected to power-line ground through the ground wire in the power cord. In addition, a redundant protective earth connection is provided through a screw on the rear panel. This terminal should be connected to a known protective earth. In the event of a failure, not using a properly grounded protective earth and grounded outlet may result in personal injury or death due to electric shock.

Do not replace detachable mains supply cords with inadequately rated cords. Failure to use properly rated cords may result in personal injury or death due to electric shock.



CAUTION

Operating the instrument on an incorrect line voltage may cause damage to the instrument, possibly voiding the warranty.

To connect line power:

1. Make sure the front-panel power switch is in the off position.
2. Connect the socket of the supplied power cord to the power connection on the rear panel.
3. Connect the plug of the power cord to a grounded AC outlet.

Turn on the instrument

Turn on the instrument by pressing the front-panel POWER switch to the on position. The instrument powers up.

Connections for testing

Use the wire ratings listed in the following table when making connections to the instrument.

 
Usage	Specifications
Front panel binding posts	AWG 20 to AWG 12
Rear panel output terminals	AWG 20 to AWG 12

CAUTION


The wire must be heavy enough not to overheat while carrying the short-circuit output current of the unit. Please meet the wiring requirements described above.

Two-wire connections


Two-wire connections are used for basic operation when maximum accuracy is not required. Keep the wire as short as possible to reduce lead inductance and noise pickup. The following illustration shows two-wire (local sensing) DUT connections to the front panel.

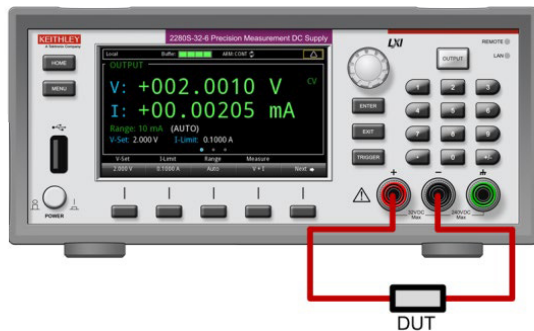

The following illustration shows two-wire (local sensing) DUT connections to the rear panel.

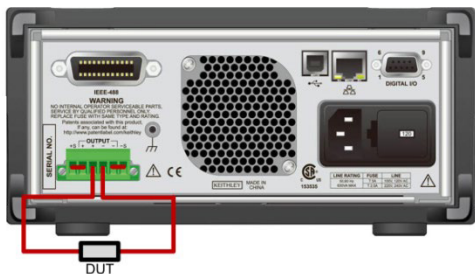 

 After making the connections, slide the cover over the rear-panel mating connector and wires.

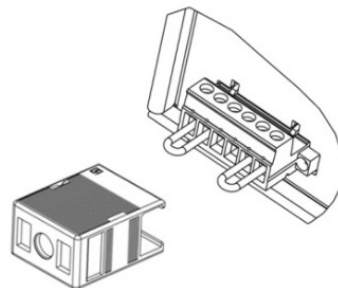

NOTE

When making two-wire connections to the Series 2280, you must short both Output Hi and Sense Hi and Output Lo and Sense Lo with the shorting jumpers. If you do not do this, the display will show incorrect voltage output readings.

 
! WARNING

Failure to install the cable housing may result in personal injury or death due to electric shock.


Four-wire remote sense connection

Using four-wire remote sensing connections ensures that the programmed voltage is applied to the load and compensates for the voltage drop in the leads between the power supply and the load.

As shipped, the sense terminals are connected to the output terminals by shorting jumpers. Before connecting the wire, make sure the shorting jumpers have been removed. When you connect the power supply for remote sensing, the remote sense circuit detects the voltage at the sensing points (load) and not the output terminals. The following illustration shows the four-wire (remote sensing) DUT connection to the rear panel.

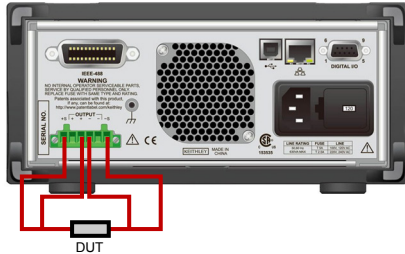

 After making the connections, slide the cover over the rear-panel mating connector and wires.

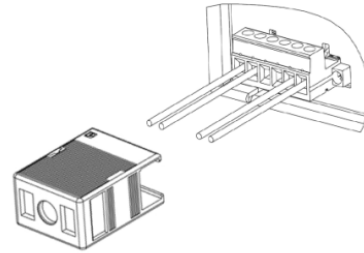

! WARNING

Failure to install the cable housing may result in personal injury or death due to electric shock.

Overview of the front-panel options



The front panel of the Series 2280 allows you to set up most instrument functions and features and perform sourcing and measuring operations. The front panel includes:

- A high-resolution color display that allows you to access instrument settings and measurement readings
- Keys that select menu options and start measurement operations
- A navigation control that can be used to select screen options
- An OUTPUT switch turns the source output on or off
- Front-panel binding posts for output connections

ENTER and EXIT keys

The ENTER key selects a highlighted option. In most cases, it opens the menu or dialog box that allows you to change settings for that option.

The EXIT key returns to the previous menu or closes a dialog box. For example, if you are on the menu screen, pressing **EXIT** returns you to the Home screen.

TRIGGER key

The action of the TRIGGER key depends on the trigger method that is selected and the state of the trigger model:

- If manual triggering is selected, pressing **TRIGGER** causes the instrument to make a measurement.
- If the trigger model is idle, pressing **TRIGGER** initiates the trigger model.

Front-panel user interface overview

The front-panel user interface gives you quick access to source settings, measure settings, system configuration, instrument status, reading buffer information, and other instrument functionality.

Home screen overview

The Home screen is the first screen that opens on power up. You can always return to the Home screen by pressing the **HOME** key.



The top row on the Home screen displays the status and event indicators. You can select these options to open dialog boxes that provide additional information about the status or event.

The OUTPUT view area of the Home screen displays the value of the present outputs and status indicators. The outputs show dashed lines until the output is turned on.

The settings area of the Home screen is on the lower left corner of the OUTPUT view area. It shows the presently set measure range, voltage, and current limit.

The soft-key area is on the bottom of the Home screen. It shows the present setting values. You can change these values by selecting the buttons below the screen. Select **Next** to view additional soft-key options.

 
Menu screen overview

When you press the **MENU** key on the front panel, the menu screen is displayed.



From this screen, you can select source, measure, Views, Trigger, and System setup menus. These menus allow you to choose options to set up your instrument for your applications. Select a menu item by either scrolling using the navigation control or using the arrow keys to highlight an icon. Then press **ENTER**.

An example of the options that are available when you select the **Settings** option under Measure is shown below.

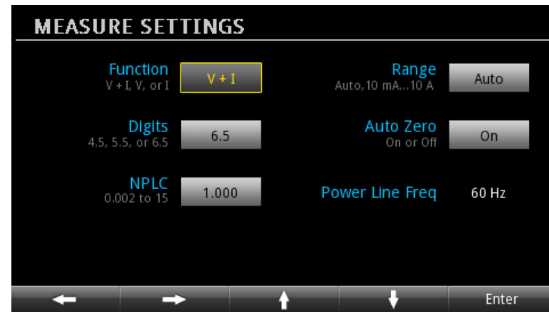

Explore

Voltage output and current measurement

The following example demonstrates how to configure a voltage output and make a precision voltage and current measurement using the default instrument configuration.

 
Connect the DUT (for this example, a 1 k Ω resistor) to the output binding post on the front panel. For details, refer to the two-wire connection drawing in the Connect section.

To set the voltage and current limit on the front panel:

1. Press the **Home** key. The Home screen is displayed.
2. Select the **V-Set** soft key. The editing window is displayed at the bottom.
3. Set the voltage to 5 V. Enter 5 using the numerical keys on the right of the front panel. You can also change the value using either the arrow keys or navigation control.
4. Press **Enter**
5. Press the **I-Limit** soft key. The editing window is displayed at the bottom.
6. Set the current limit to 1 A. and press **ENTER**.
7. Press the **OUTPUT** switch to turn the output on.

CAUTION

When the output is turned on, changing the value with the navigation control can source voltage and current instantly. Make sure the output does not damage your device under test (DUT).

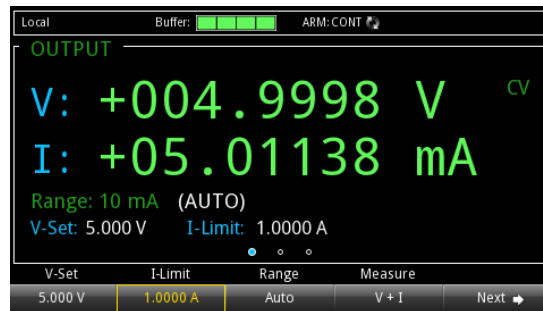

Select a measure function

The Series 2280 allows you to perform the following measurement functions.

Measure functions	What the instrument measures
Concurrent (V + I)	Measure voltage and current at the same time
Voltage (V)	Only measure voltage
Current (I)	Only measure current

To set the measure function from the menu screen:

1. Press the **MENU** key.
2. Under Measure, select **Settings**.
3. Select the button next to **Function** and press the **ENTER** key. The selection window is displayed.
4. Select a measure function.

To set the measure function from the Home screen:

1. Select the **Measure** soft key. The selection window is displayed.
2. Select a measure function.

Specify a measurement range

You can set specific ranges for the measurement values or you can allow the instrument to choose the ranges automatically.

The measurement range determines the full-scale input for the measurement. The measurement range also affects the accuracy of the measurements and the maximum signal that can be measured.

Model number	Current measurement range	Voltage measurement range
2280S-32-6	10 A 1 A 100 mA 10 mA	32 V
2280S-60-3	10 A 1 A 100 mA 10 mA	60 V

The Series 2280 has multiple current measurement ranges and one voltage range. The ranges are listed in the following table.

To set the ranges from the Home screen:

1. Press the **HOME** key and select the **Range** soft key. The Range dialog box is displayed.
2. Use the up and down arrow soft keys to select the range. The Home page is updated with the new range setting. Press **EXIT** to close the Range dialog box.

To set the ranges from the menu screen:

 
1. Press the **MENU** key.
2. Highlight the **Settings** icon under Measure using either the navigation control or the soft keys. Press **ENTER**.
3. On the MEASURE SETTINGS page, select the button next to **Range**. The Range dialog box is displayed.
4. Select the range. You are returned to the MEASURE SETTINGS screen.

Configure and execute a 10-step linear list sweep

The following example demonstrates the steps to set up the power supply to output a linear list sweep from 1 V to 10 V in 1 V steps (default settings). Each step in the list sweep dwells for three seconds. The list is stored in list location 1. The output turns on at 0 V and returns to 0 V at the end of the list execution.

To configure a list using the front panel:

1. Press the **MENU** key.
2. Under Source, highlight the **List** icon using either the navigation control or the soft keys. Press **ENTER**.
3. Select point 1 and press **ENTER**.
4. Highlight **Insert** and press **ENTER** to increment the points display until there are 10 points.
5. Select the Voltage box in the point 1 row. Press **ENTER**.
6. Set the value to 1 V and press **ENTER**.
7. Select the Current box in the point 1 row. Press **ENTER**.
8. Set the value to 2 A and press **ENTER**.
9. Select the Dwell box in the point 1 row. Press **ENTER**.
10. Set the value to 3 s and press **ENTER**.
11. Repeat steps 5 to 8 for points 2 to 10 and increase the voltage by 1 V at each higher step.
12. Select the **Save** button to store the list in memory location 1.
13. Enter a name for the list on the displayed keypad and press **ENTER**.
14. Press the **EXIT** key.

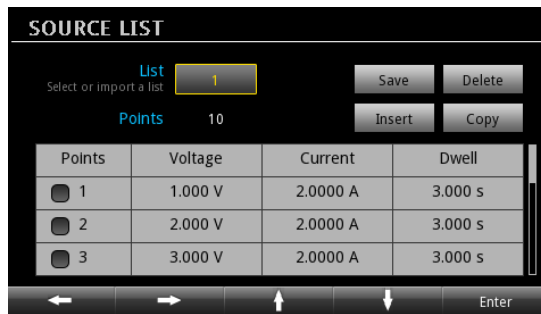


To delete a row using the front panel:

1. Highlight the Points cell of the row you want to delete.
2. Press **ENTER** to select the cell row.
3. Navigate to **Delete**.
4. Press **ENTER**.

To execute a list sweep using the front panel:

 1. Press the **MENU** key.
2. Under Trigger, highlight the **Configure** icon using either the navigation control or the soft keys. Press **ENTER**.
3. Select the button next to **Sample Count** and press the **ENTER** key.
4. Set the sample count to 10.
5. Press the **HOME** key.
6. Press the **Next** soft key twice to go to the third soft-key area.
7. Press the **List** soft key. The List dialog box is displayed.
8. If the **Number** soft key is not showing a 1, press the **Number** soft key and enter the value, 1.
9. Press the **Enable** soft key to run list 1.

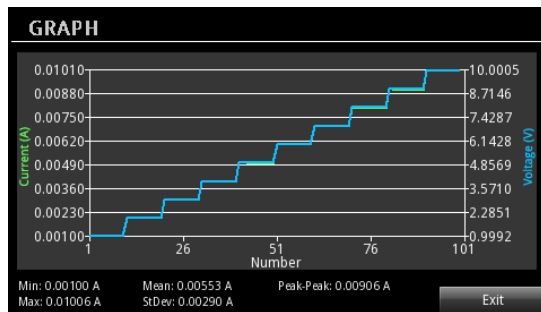

To view the measurements on the front panel:

1. Press the **Exit** key to close the List dialog box.
2. Press the **View** soft key under Graph to view a plot of the measurements.

Next steps

For more information, refer to the *Series 2280 Precision DC Power Supply Reference Manual*, which provides detailed information about all of the features of the instrument.

Also see the Keithley Instruments website, [tek.com/keithley](https://www.tek.com/keithley) for support and additional information about the instrument.

FAQs and next steps

Contact information:

Australia* 1 800 709 465

Austria 00800 2255 4835

**Balkans, Israel, South Africa, and other
ISE countries** +41 52 675 3777

Belgium* 00800 2255 4835

Brazil +55 (11) 3759 7627

Canada 1 800 833 9200

Central East Europe / Baltics
+41 52 675 3777

Central Europe / Greece +41 52 675 3777

Denmark +45 80 88 1401

Finland +41 52 675 3777

France* 00800 2255 4835

Germany* 00800 2255 4835

Hong Kong 400 820 5835

India 000 800 650 1835

Indonesia 007 803 601 5249

Italy 00800 2255 4835

Japan 81 (3) 6714 3010

Luxembourg +41 52 675 3777

Malaysia 1 800 22 55835

**Mexico, Central/South America, and
Caribbean** 52 (55) 56 04 50 90

Middle East, Asia, and North Africa
+41 52 675 3777

The Netherlands* 00800 2255 4835

New Zealand 0800 800 238

Norway 800 16098

People's Republic of China 400 820 5835

Philippines 1 800 1601 0077

Poland +41 52 675 3777

Portugal 80 08 12370

Republic of Korea +82 2 565 1455

Russia / CIS +7 (495) 6647564

Singapore 800 6011 473

South Africa +41 52 675 3777

Spain* 00800 2255 4835

Sweden* 00800 2255 4835

Switzerland* 00800 2255 4835

Taiwan 886 (2) 2656 6688

Thailand 1 800 011 931

United Kingdom / Ireland* 00800 2255 4835

USA 1 800 833 9200

Vietnam 12060128

* European toll-free number. If not
accessible, call: +41 52 675 3777

Find more valuable resources at TEK.COM
Copyright © 2019, Tektronix. All rights reserved.
Tektronix products are covered by U.S. and
foreign patents, issued and pending. Information
in this publication supersedes that in all previously
published material. Specification and price change
privileges reserved. TEKTRONIX and TEK are
registered trademarks of Tektronix, Inc. All other
trade names referenced are the service marks,
trademarks, or registered trademarks of their
respective companies.



071319001 / March 2019

